



1

CONCRETE
ANCHOR
PLATE

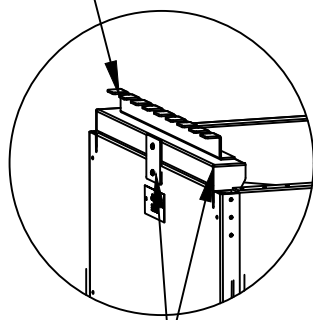

HINGE &
ALIGNMENT
PLATES

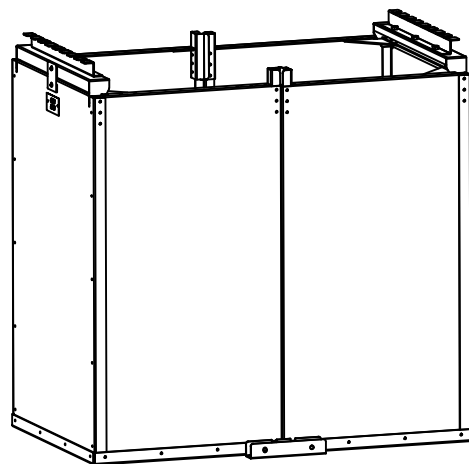

2


FOR DRY CONCRETE, PROCEED TO STEP 4

FOR WET CONCRETE:

PLACE UNIT UPSIDE DOWN ON
CARDBOARD TO PROTECT FINISH
FROM SCRATCHES.

OPEN KIT AND ASSEMBLE
ALIGNMENT PLATES TO THE MIDDLE
OF THE HINGE WITH SUPPLIED 3/8
NUTS AND WASHERS.

MOUNT CONCRETE ANCHOR PLATES
TO THE HINGE WITH SUPPLIED 3/8
NUTS AND BOLTS.

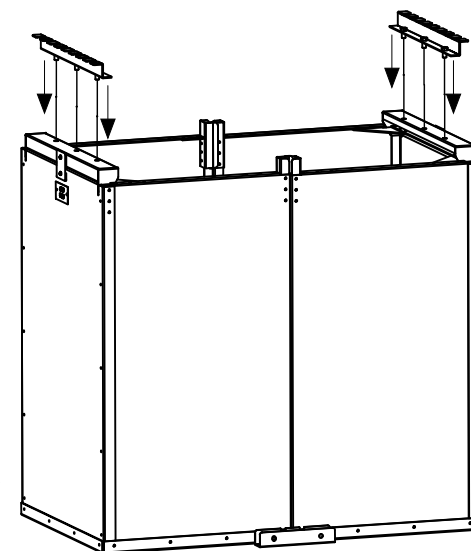

3



LOCK RODS

LOCK
COVER

LOCK
PLATE


1. PLACE TWO 2X4 BOARDS ON EACH SIDE
OVER THE CONCRETE FORM TO KEEP
THE COVER SUPPORTED ABOVE THE
CONCRETE PAD.
2. PLACE IN WET CONCRETE ONE SIDE AT A
TIME.
3. SMOOTH THE CONCRETE AROUND THE
FINGERS AND SLOPE THE CONCRETE
AWAY FOR PROPER DRAINAGE.
4. PLACE LOCK ROD INTO TOP HOLES FOR
PROPER ALIGNMENT OF THE TWO
HALVES.
5. WAIT UNTIL THE CONCRETE HAS CURED
BEFORE MOVING THE SUPPORT BOARDS.

****IMPORTANT** REMOVE THE HINGE ALIGNMENT PLATES (2 EA.)
AFTER CONCRETE CURES BEFORE OPENING. NOT DOING SO
CAN VOID THE WARRANTY.**

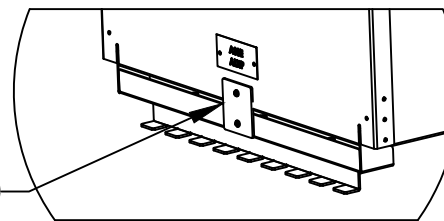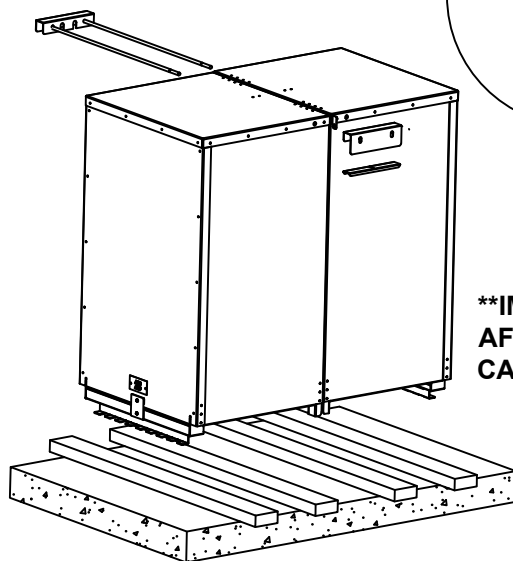


4

1. USE THESE DIMENSIONS FOR DRY
CONCRETE MOUNTING.
2. USE DRILL IN ANCHORS FOR EXISTING
APPLICATIONS. (6.00" BETWEEN HOLES
ON ANCHOR PLATE)

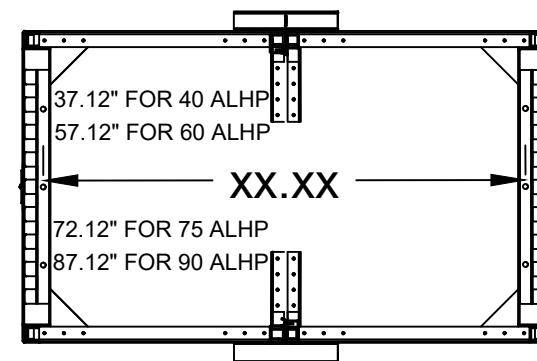


1

PLACA DE ANCLAJE DE HORMIGÓN

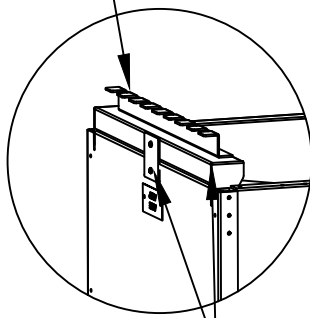

BISAGRA Y PLACAS DE ALINEACIÓN

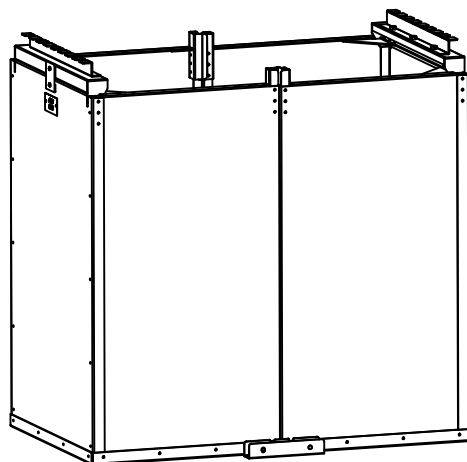

2


PARA EL HORMIGÓN SECO, CONTINÚE CON EL PASO 4

PARA HORMIGÓN HÚMEDO:

COLOQUE LA UNIDAD BOCA ABAJO SOBRE CARTÓN PARA PROTEGER EL ACABADO DE ARAÑAZOS.

ABRA EL KIT Y ENSAMBLE LAS PLACAS DE ALINEACIÓN EN EL CENTRO DE LA BISAGRA CON TUERCAS Y ARANDELAS DE 3/8 SUMINISTRADAS.


MONTE PLACAS DE ANCLAJE DE HORMIGÓN A LA BISAGRA CON TUERCAS Y PERNOS DE 3/8 SUMINISTRADOS.

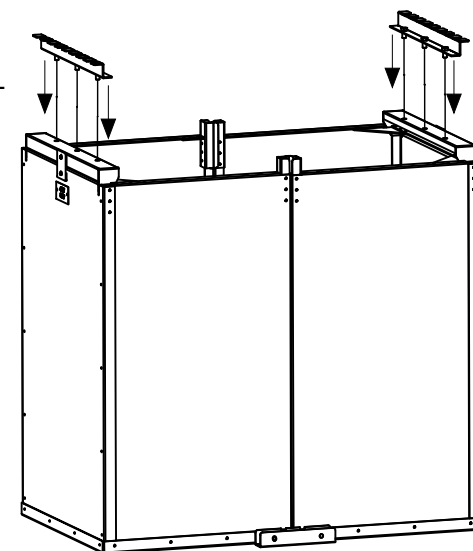

3

BARRAS DE BLOQUEO


TAPA DE BLOQUEO

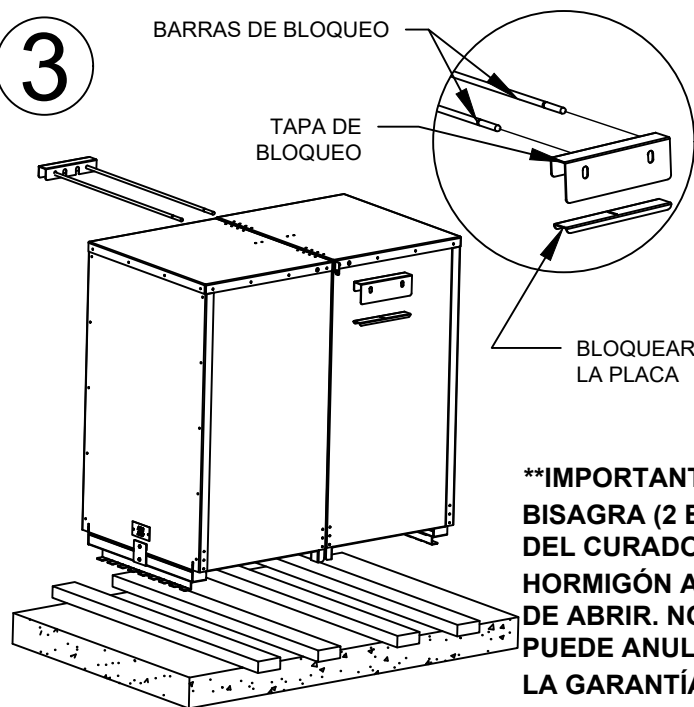

BLOQUEAR LA PLACA

1. COLOQUE DOS TABLAS DE 2X4 A CADA LADO SOBRE LA FORMA DE CONCRETO PARA MANTENER LA CUBIERTA APOYADA SOBRE LA ALMOHADILLA DE CONCRETO.
2. COLOQUE EN CONCRETO HÚMEDO UN LADO A LA VEZ.
3. ALISE EL CONCRETO ALREDEDOR DE LOS DEDOS E INCLINE EL CONCRETO PARA UN DRENAJE ADECUADO.
4. COLOQUE LA BARRA DE BLOQUEO EN LOS ORIFICIOS SUPERIORES PARA LA ALINEACIÓN ADECUADA DE LAS DOS MITADES.
5. ESPERE HASTA QUE EL CONCRETO SE HAYA CURADO ANTES DE MOVER LAS TABLAS DE SOPORTE.

****IMPORTANTE** RETIRE LAS PLACAS DE ALINEACIÓN DE LA BISAGRA (2 EA.) DESPUÉS DEL CURADO DEL HORMIGÓN ANTES DE ABRIR. NO HACERLO PUEDE ANULAR LA GARANTÍA.**

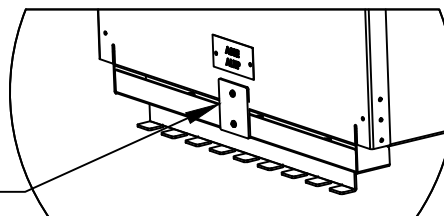

4

1. UTILICE ESTAS DIMENSIONES PARA EL MONTAJE DE HORMIGÓN SECO.
2. UTILICE TALADRO EN ANCLAJES PARA APLICACIONES EXISTENTES. (6.00 ENTRE ORIFICIOS EN LA PLACA DE ANCLAJE)

